

the first years®
Expert developed ♥ Parent preferred

Before returning this product to the store for any reason,
please contact our Parent Service Center at
1-800-533-6708 or www.thefirstyears.com
We can provide helpful tips and instructions, and may be able
to resolve your problem over the phone or via e-mail.

Night & Day Bottle Warmer

INSTRUCTIONS:
Read carefully before using.

**keeps bottles cool, then warms them
quickly & consistently**



1259/1058B

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS:


When using electrical products, basic safety precautions should always be followed:

- Read all instructions before using.
- Do not touch hot surfaces.
- To protect against electric shock, do not immerse cord in water or any other liquid.
- Close supervision is necessary when any appliance is used near children.
- Always turn switch on power cord OFF before unplugging from wall outlet. Allow unit to cool before removing warming chamber basket.
- Do not operate this unit with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return unit to The First Years for examination or repair.
- The First Years does not make, offer, or recommend any accessory attachments for this unit. The use of any kind of accessory attachments may cause injuries.
- For household use only. Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Extreme caution must be used when moving an appliance containing hot liquids.
- Do not use this unit for anything other than its intended use outlined in this manual.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- This product does not require preheating.
- A short (or detachable) power supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer (detachable power supply cords or) extension cords are available and may be used if care is exercised in their use.
- If a long (detachable power supply cord or) extension cord is used,
 - (1) the marked electrical rating of the (detachable power supply cord or) extension cord should be at least as great as the electrical rating of the appliance.
 - (2) if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
 - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

To prevent injury, follow manufacturer's instructions for all bottles and test temperature of contents before giving bottle to your child.

- The user should not attempt to service or repair the unit. Refer all servicing to The First Years: 1-800-533-6708 or www.thefirstyears.com. No serviceable parts inside.

Contents

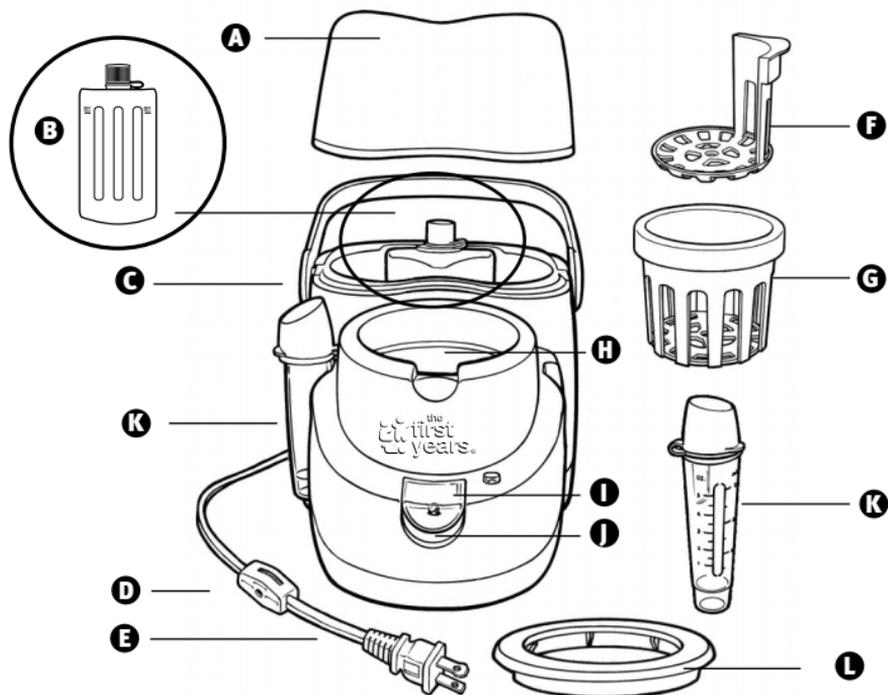

A cover

B removable ice container

C insulated cooler

D power switch

E power cord

F mini basket

G basket

H warming chamber

I power indicator light

J ON button

K measuring containers (2)


L adapter ring

Set up Instructions

Water Measurement Grid

Bottle Style	Wide Mouth bottles		Standard bottles		Disposables	
	5 oz.	9 oz.	4 oz.	8 oz.	4 oz.	8 oz.
Cool bottle (from cooler or refrigerator)	6	10	7	8	2	4
Warm bottle (room temperature)	5	9	7	8	1	3
Baby food jars <small>Use lift out basket; remove jar cover before heating</small>	All Sizes = 9					

NOTE: If your bottle is too cool after heating, try adding a little more water next time. If your bottle is too hot after heating, try adding a little less water next time.

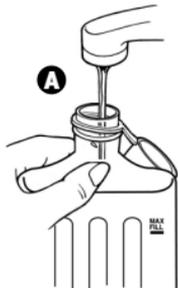

Before you begin:

A Fill the ice container with water to the max fill line indicated on outside of container. Place it in the freezer until frozen solid. (You may want to keep an extra ice container in the freezer so you always have one frozen and ready. To order additional ice containers, please contact our Parents Service Center at 1-800-533-6708.)

1. Position the Bottle Warmer on any convenient flat surface. Be sure to place it and its cord out of the reach of children.
2. Insert the plug into wall outlet. Using the switch on the cord, turn the unit on. The power indicator light will come on and stay on as long as unit is plugged in.
3. Place the frozen ice container in the cooler compartment along with 1 or 2 chilled bottles from your refrigerator, and cover. **Never place, or leave, a bottle in the cooler unless the ice container is in place and is frozen solid. Always refreeze the ice container once it begins to thaw.**
4. Refer to water measurement grid to determine the amount of water needed to warm your baby's bottles for the best heating results. Fill the measuring containers to the EXACT numbers recommended depending on your bottle type and start temperature (cool vs. room temperature).

To warm



1. Preheating is not necessary. Pour the pre-measured contents of one measuring container into the warming chamber. **DO NOT OVERFILL. If too much water is used, bottle may be heated for too long a period and reach too high a temperature. Overfilling may also cause damage to the unit.**
2. Position your bottle in the warming chamber. If you still have a chilled bottle in the cooler, be sure to replace cover securely. Position your bottle in the warming chamber. **(continued on page 5)**

To warm (continued)

For **standard reusable bottles (straight or angled)**, snap the adapter ring onto the top of the warming chamber. The ring will keep the bottle properly centered for even heating.

For **disposable bottles and baby food jars**, place in the lift-out basket and insert into the warming chamber. **Do not remove the larger basket.**

NOTE: Open lid of baby food jar before placing in the lift-out basket.

For **wide-neck bottles**, there is no need to use the lift-out basket or adapter ring.



WARNING:

- Never place a bottle or jar in the warming chamber without using one of the baskets. Bottle or jar could be damaged or overheated.
3. Press the ON button. It will illuminate to let you know that heating is in progress.
 4. **When the light goes out, the warming cycle is complete.** The heater will shut off automatically. **Remove bottle immediately so it will not continue heating.** After heating, use tab to remove bottle or jar. **Bottles/Jars may be hot. Remove from chamber and allow 1 minute to cool before handling.**

NOTE: If bottle gets too warm, use **slightly less** water next time. If bottles do not seem quite warm enough, use **slightly more** water. **Wait 10 minutes before heating another bottle.**



WARNING:

- Not recommended for use with glass feeding bottles as sudden temperature change may cause glass to break.
- Do not place your hands in or around the warming chamber during heating.
- To prevent injury, follow manufacturer's instructions for all bottles. Test temperature of contents before giving bottle to your child.

To clean

Ice container, measuring containers, and baskets: Dishwasher-safe (top rack only). Measuring containers should be placed in a dishwasher basket. Or wash in warm water using mild liquid soap. Rinse with clear water.

Bottle Warmer unit and removable cooler: Always turn OFF and unplug before cleaning. Wipe surface of unit as well as inside of cooler and cooler lid, and inside of warming chamber with a damp cloth or sponge using mild liquid soap. Wipe with clear water. Air dry. **Do not immerse in water. Do not use scouring pads, solvents, or abrasive cleaners, as these could damage the unit.**

Warming chamber (optional): Mineral deposits (usually white in color) may form on the inner surfaces of the warming chamber and can cause damage to the unit. To remove them:

1. Unplug the unit.
2. Remove the basket, and wash separately as indicated above.
3. Pour 2 oz. vinegar into the warming chamber and let it stand for an hour or two (longer if necessary).
4. Pour out the vinegar and rinse the chamber two or three times by pouring in, then emptying out, 3 or 4 oz. of plain tap water. **Do not immerse the Bottle Warmer in water.** Wipe dry or air dry.

ONE (1) YEAR LIMITED WARRANTY

The First Years warrants this product to be free from defects in material and workmanship for a period of one year from the date of original purchase. Should this product prove to be defective at any time during the warranty period, The First Years will, at its option, either replace or repair it without charge. For warranty service, please return the product along with dated sales receipt or other proof of the purchase date to The First Years at the address below. This warranty does not cover damage caused by accident, misuse, abuse, improper maintenance, unauthorized modification, or connection to an improper power supply. A charge will be made for repair of such damage. This warranty excludes all incidental or consequential damages and any liability other than what is stated above. The First Years makes no other warranties regarding this product (including warranties as to merchantability and fitness for a particular purpose) either express or implied. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow the exclusion or limitation of implied warranties, so the above limitations or exclusions may not apply to you. Legal rights vary from state to state.

Visit us at www.thefirstyears.com

©2004 The First Years, Inc. Avon, MA 02322-1171

Made in China to The First Years' quality specifications

1259/1058B.09.28.04